

# Licenses comparison table

Functionality	Licenses		
	Base	Advanced	RFE
Frequency limits	70 MHz	230 MHz	500 MHz
<b>Chart modes</b>			
SWR Chart	✓	✓	✓
RX Chart	✓	✓	✓
Return Loss Chart	✓	✓	✓
Smith Chart		✓	✓
TDR Chart			✓
<b>Table modes</b>			
SWR Meter	✓	✓	✓
MultiSWR Meter	✓	✓	✓
R, X, Z, L, C, Loss Meter	✓	✓	✓
Multé		✓	✓
MultiBand		✓	✓
Quick band		✓	✓
<b>Tools</b>			
Stub Tuner		✓	✓
Length vs VF		✓	✓
Cable Loss		✓	✓
Cable Impedance		✓	✓
Self Tests	✓	✓	✓
OSL Calibration		✓	✓
User OSL Calibration Profiles			✓
LC meter			✓
<b>Features</b>			
SWR2Air feature		✓	✓
BLE Feature		✓	✓
Memory Slots for saving measurements	✓	✓	✓
Jump to Extremum Value	✓	✓	✓
Save Measurements	✓	✓	✓
Load Measurements	✓	✓	✓
Choosing GUI Language	✓	✓	✓
Choosing GUI Palette	✓	✓	✓
Choosing Battery Profile	✓	✓	✓
Controlling Sound	✓	✓	✓
Selecting System Impedance	✓	✓	✓
Choosing Metric/Imperial Units	✓	✓	✓
Choosing ITU Regions	✓	✓	✓
Setting the Cable Velocity Factor	✓	✓	✓
Setting Frequency Correction Factor	✓	✓	✓
Factory Reset	✓	✓	✓
Clearing Saved Charts	✓	✓	✓
<b>Languages</b>			
English	✓	✓	✓
Ukrainian	✓	✓	✓
Spain	✓	✓	✓
French	✓	✓	✓
German	✓	✓	✓
Portuguese	✓	✓	✓
Italian	✓	✓	✓